Installation Instructions

Installation instructions, accessories


EX90 2025


Volvo Car Corporation Gothenburg, Sweden

Instruction No	Version	Part. No.
32321808	1.0	32321802



Mudflaps, front

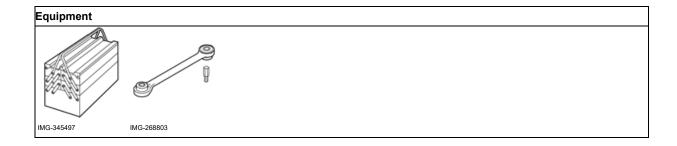

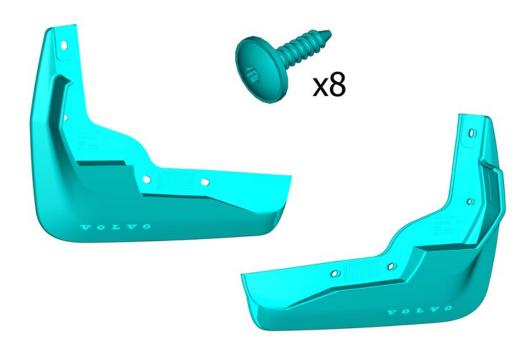

IMG-500549



1 of 4 3/4/2025, 2:33 PM

Information

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.


Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Color symbols

2

IMG-400010

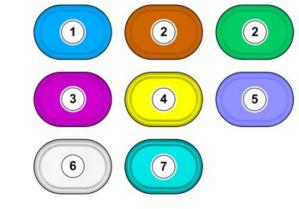

Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- 2. Used as extra colors when you need to show or differentiate additional narts
- 3. Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- Used when the component is not fully removed from the vehicle but only hung to the side.
- $5. \ \mbox{Used}$ for standard tools and special tools.
- 6. Used as background color for vehicle components.
- 7. Used for accessory components.


Removal



2 of 4 3/4/2025, 2:33 PM




Turn the wheel outwards.

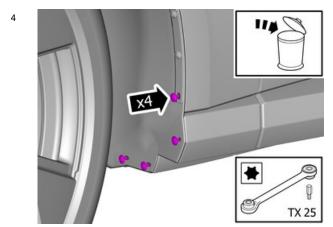

Remove the screws.

The parts are not to be reused.

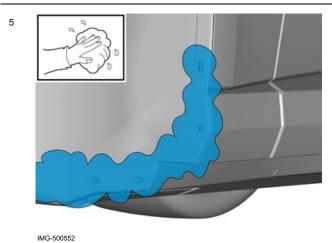


Clean the surface.

Accessory installation




3 of 4 3/4/2025, 2:33 PM



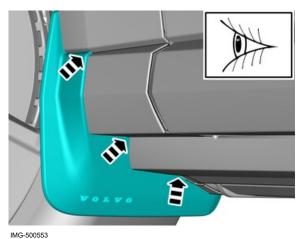

Install component that comes with the accessory kit.

Adjust the position of the component according to image.

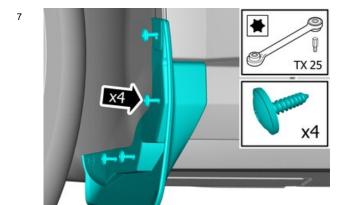

Install components that come with the accessory kit.

Install the screws.

8

Repeat all method steps for the other side.

© Volvo Car Corporation

IMG-500554

Mudflaps, front- 32321808 - V1.0



4 of 4